EN

CERAMIC FAN HEATER

SPLITTO JR

INSTALLATION AND OPERATION INSTRUCTIONS

Read the instructions carefully before installing and operating the appliance or performing maintenance operations. Observe all the safety instructions; failure to observe the instructions may cause accidents and/or damages. Store these instructions for future reference.

GENERAL SAFETY INFORMATION

- Use this ceramic fan heater only as outlined in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury to persons.
- Ensure that the mains power complies with the voltage specified on the fan heater's data plate (220-240VAC/50Hz).
- This product is not a toy. Children should be adequately supervised to ensure that they do not play with the appliance.
- This appliance is not suitable for use by persons (including children) with reduced physical, sensory or mental abilities, or without the necessary experience and knowledge, unless they have been adequately supervised and instructed concerning use of the appliance by a person responsible for their safety.
- Do not cover the appliance or restrict the air inlet and outlet grilles to prevent overheating.
- Ensure that all objects are at least 1 meter from the front and sides of the appliance.
- Disconnect the mains power when the appliance is not used or for cleaning operations.
- Avoid using the fan heater in dusty environments or in the presence of inflammable vapours (e.g. in workshops or garages) or paint vapours.
- Do not use the appliance to dry clothing.
- Use the appliance in a well-ventilated area.
- Avoid placing fingers or foreign objects in the air inlet/outlet grilles, as this may lead to electric shock or fire and may damage the appliance. To avoid the risk of fire, do not block the grilles or tamper with them in any way while the ceramic fan heater operates.
- Do not use the appliance if the cord or plug are damaged. If the power supply cord is damaged, it must be replaced by the manufacturer, dealer or a similarly qualified person so as to avoid any safety risks.
- Do not operate the appliance if it has fallen from a height or has suffered damage in any way. Contact qualified technical personnel to examine the appliance or perform any electrical or mechanical repairs.
- The most common cause of overheating is the build-up of dust in the appliance. Remove dust deposits by unplugging the appliance and cleaning the air outlets and grilles with the aid of a vacuum cleaner.
- Do not use abrasive detergents for cleaning this appliance. Clean the appliance with the aid of a damp (not wet) cloth rinsed in hot soapy water. Always remove the plug from the mains socket before cleaning.
- To disconnect the ceramic fan heater, push the switch to OFF and remove the plug from the socket. Pull on the plug only. Avoid pulling on the cord when disconnecting the ceramic fan heater.
- Do not place any objects on the cord and do not bend it.
- It is not advisable to use extension cords, as these may overheat and cause the risk of fire. Do not use a single extension cord to operate multiple appliances.
- Do not immerse the cord, plug or any other element of the appliance in water or other liquids.
- Do not touch the plug with wet hands.
- Do not place the fan heater above or near another heat source.
  WARNING: AVOID COVERING THE FAN HEATER TO PREVENT IT FROM OVERHEATING.
  The symbol below signals the above warning:

- The fan heater may cause the risk of fire if, while in operation, is covered by or comes into contact with **inflammable** material including curtains, drapery, blankets, etc. **KEEP THE FAN HEATER AWAY FROM THESE MATERIALS**.
- Do not connect the appliance to the mains power before it has been properly assembled and positioned.
- The appliance heats up slightly when in use. In order to avoid burns, do not let bare skin touch hot surfaces.
- Do not run the cord under carpets. Do not cover the cord with blankets, carpets or similar materials. Place the cord far away from busy areas or where it cannot be accidentally pulled-out.
- Do not operate the fan heater in close proximity to bathtubs, showers, washbasins or pools.
- Do not position the fan heater below a socket outlet.
- Do not operate the appliance outdoors.

WARNING: **do not use the fan heater with a controller or any other device that activates the appliance automatically, as there may be a risk of fire if the fan heater is covered or incorrectly positioned.**

- Upon initial start-up, the fan heater may emit a slight, harmless smell. This smell is a normal effect of the initial heating up of the internal heating elements, and should not recur later on.

- Do not attempt to repair, disassemble or modify the appliance. The appliance does not contain parts that can be repaired by the user.
  WARNING: ALWAYS UNPLUG THE APPLIANCE BEFORE PERFORMING MAINTENANCE OPERATIONS.
- Do not place anything on the product; avoid placing wet garments on the fan heater.
- Turn the appliance off if unattended in order to avoid accidents.
- Ensure that the product does not operate in the presence of unsupervised children, animals or disabled persons.
- If the product is not used for prolonged periods, disconnect the plug, replace the product in its packaging and store it in a dry, ventilated place.
- Ensure that the air inlet /outlet are not close to walls or curtains when the product is in use, so as to avoid obstructing the product and hampering its efficiency.
- If the product emits unusual noises or strange smells during operation, interrupt use and unplug it immediately.
- Do not let the cord dangle over the edge of a sink, worktop or similar objects.
- Handle the appliance, cord or plug with dry hands only.
- Never immerse the appliance in water or other liquids.
- Do not operate the appliance near explosive or inflammable material.
- Always switch off the appliance and unplug it in the following cases:
  - If it does not function properly during use.
  - Prior to maintenance operations.
  - Before removing the plug.
  - After using the appliance.

STRUCTURE AND PARTS

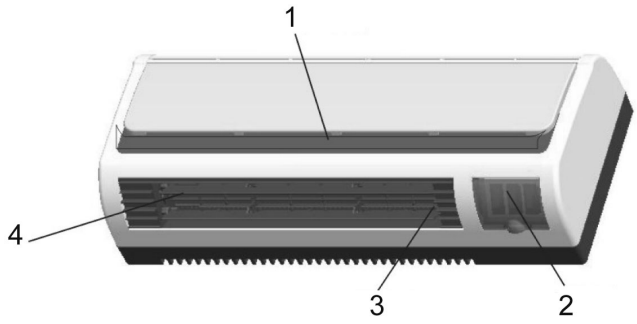

1. **Front panel**
2. **Control panel lid**
3. **Air discharge grille**
4. **Swinging flap**

CONTROL PANEL ON THE APPLIANCE

From left, the symbols on the control panel correspond to the following functions:

1. POWER/WIND: ON/OFF

2. HEATER: heating power selection

0= cold air

I = minimum heating power **(1,000 W)**

II= maximum heating power **(2,000W),**

3 - VANE: horizontal swinging flap

0= swinging off

I = swinging on

INSTALLATION INSTRUCTIONS

This fan heater is designed for wall-installation; it must be mounted 1.8 m above the floor and at least 25 cm from the wall on each side. Do not install on the floor.

The fan heater must be installed on the wall before use. The installation sequence is listed below:

1. Select a space for installing the appliance (see Figure 1).
2. Drill two holes that are suitably sized for inserting the Fischer rawlplugs (see Figure 2) – D=460 mm.
3. Insert the Fischer rawlplugs into the holes and tighten the screws provided.

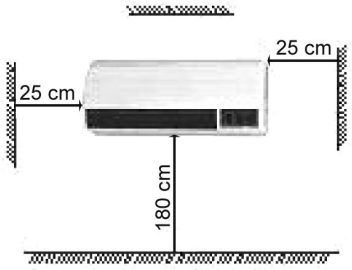

Figure 1

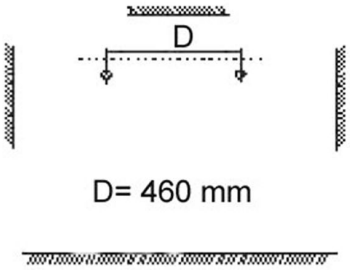

Figure 2

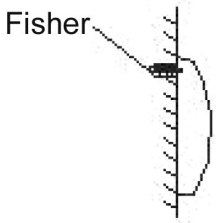

Figure 3

NOTE: tighten the screws securely. Do not insert the screws into the Fischer rawlplugs entirely - leave around 3-5 mm free.

Mount the appliance on the wall (see Figure 3): ensure that the holes on the rear of the appliance are directed towards the two screws, push the fan heater backwards onto the wall then downwards until it lies in a stable position.

OPERATION INSTRUCTIONS

THIS APPLIANCE IS INTENDED FOR HOUSEHOLD USE ONLY.

HEATING POWER: MINIMUM 1,000 W - MAXIMUM 2,000 W

POWER SUPPLY: . 220-240VAC/50Hz

Before turning the fan heater on, check that all the buttons of the product's control panel are on 0. Insert the plug directly into an AC socket with mains voltage corresponding to that indicated on the product's data plate. Make sure that the plug fits tightly into the socket.

1. Press the **POWER** button to turn the appliance on: check whether it functions properly.
2. Press the **HEATER** button to select the appliance's operating power level:
   0 – cold air discharge
   I – air discharge at minimum power - 1,000 W
   II – air discharge at maximum power - 2,000 W
3. Press the **VANE** button to activate the horizontal swinging flap.
   0 – swinging off
   1 – swinging on

PROTECTION SYSTEM

The appliance includes a protection system against overheating that interrupts operation when certain components heat up excessively.

To turn the fan heater off completely, push all buttons to OFF and remove the plug from the socket.

WARNING: THE ON/OFF SWITCH IS NOT THE ONLY MEANS TO DISCONNECT THE POWER SUPPLY. WHEN THE APPLIANCE IS NOT USED OR IN THE EVENT OF MAINTENANCE OPERATIONS, ALWAYS PULL OUT THE PLUG FROM THE SOCKET.

MAINTENANCE INSTRUCTIONS

1. Always remove the plug from the socket and leave the appliance to cool before cleaning.
2. Use a damp cloth to clean the appliance exterior and remove dust or dirt. Leave the casing to dry before using the appliance or plugging it into the socket.
3. Do not let water fall into the appliance.
4. Do not use benzene, solvents or abrasive compounds to clean the product, as these may damage the product's casing.
5. Use a vacuum cleaner to remove dust and residues from the air inlet/outlet grilles.
6. Ensure that the appliance is dry before inserting the plug.
7. Do not use metal tools to clean the appliance. Metal fragments that detach may come into contact with the appliance's electrical components and cause a short-circuit.
8. In the event of malfunctions or damages, always contact a technician for carrying out repairs.

STORAGE INSTRUCTIONS

If the appliance is not used for prolonged periods, it must be stored together with this manual in its original packaging, in a cool and dry place.

INFORMATION ON PROPER DISPOSAL OF THE APPLIANCE IN COMPLIANCE WITH EUROPEAN DIRECTIVE 200/94/EC.

When this appliance reaches the end of its useful life, it must not be disposed of together with household waste but must be delivered to appropriate separate waste disposal plants or to dealers that provide similar service. Separate waste disposal of electrical and electronic appliances prevents possible negative effects on the environment and human health resulting from inadequate disposal, and also allows for recovering and recycling the materials comprising the appliances to ensure significant saving in terms of energy and resources. The separate disposal obligation is underlined by the crossed-out dustbin symbol appearing on the product. Illegal disposal of the product by the user shall determine the application of the administrative sanctions defined by the regulations in force.

argo
improve your life

www.argoclima.com